



Premier & Deluxe 3-Season Room

Deluxe Swinging Door

Installation Instructions



Read the instructions before starting the job. They explain the steps required to produce a finished product that will meet factory specifications.

All references to “Left” and “Right” are while facing the home.

Check the material received.
Match your shipment with the Bill of Materials.
If there is a shortage or wrong material,
call Dealer Service immediately.

Safety is important!
Wear Safety Glasses and Work Gloves.
Follow all safety practices while assembling
and installing this product.


Dura-Bilt Products, Inc. P.O. Box 188 Wellsburg, N.Y. 14894

Dealer Service 570-596-2000 E-Mail info@durabilt.com

DURA-BILT RESERVES THE RIGHT TO CHANGE DESIGN AND/OR SPECIFICATIONS WITHOUT NOTICE.


Deluxe Swinging Door Installation

1. The wall layout plan shows the location of the Hinged door(s) for your room.
2. It is necessary to cut out and remove a 35-5/8" section of the Floor Channel where the door will be located. This is done before the Floor Channel is fastened down. Removing this section of Floor Channel allows the threshold to be fastened directly to the floor of the room.
3. The wall layout plan gives the measurement to locate the first cut in the Floor Channel. Mark that position and then mark the location for the second cut 35-5/8" from the first mark. Caulk and attach the floor channel.
4. After removing door from carton, move it as close as possible to where it will be installed. Then remove packing support-board under threshold. After it has been removed, move the door as little as possible to put into position.
5. Insert Door Panel Frame in adjacent Wall Panel Frame. Install door hardware, being certain that striker is aligned with striker plate. Adjustment is made by raising or lowering the latch-side of door frame. Adjust hinge side of frame, if necessary, to keep door square in the frame. Fasten frame in place using #8 x 1/2" Self-Drilling Screws into Panel Frames on each side. If you have finished all other Panel installation, use #8 x 1/2" screws through Floor Channel into Panel Frames, inside and outside.

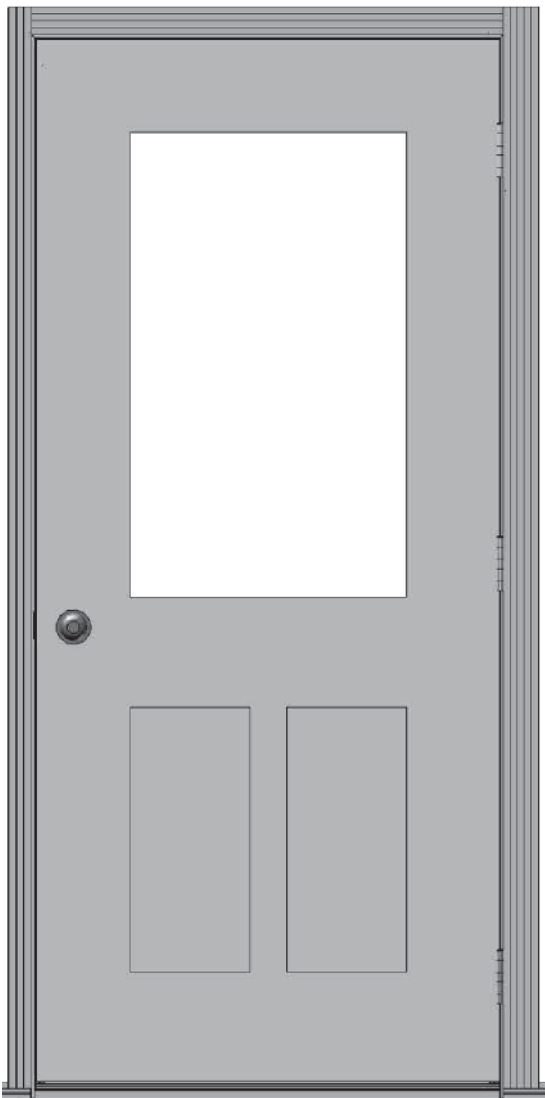

Note: The installation instructions for the door hardware are in the box.

6. Remove the four oversize screws in the Threshold Cap. Drill and counterbore holes at center and at each end of wood base. Caulk the bottom of the Threshold and fasten to floor with #12 x 2" hex screws. Replace Threshold Cap and adjust height to door sweep on bottom of door.

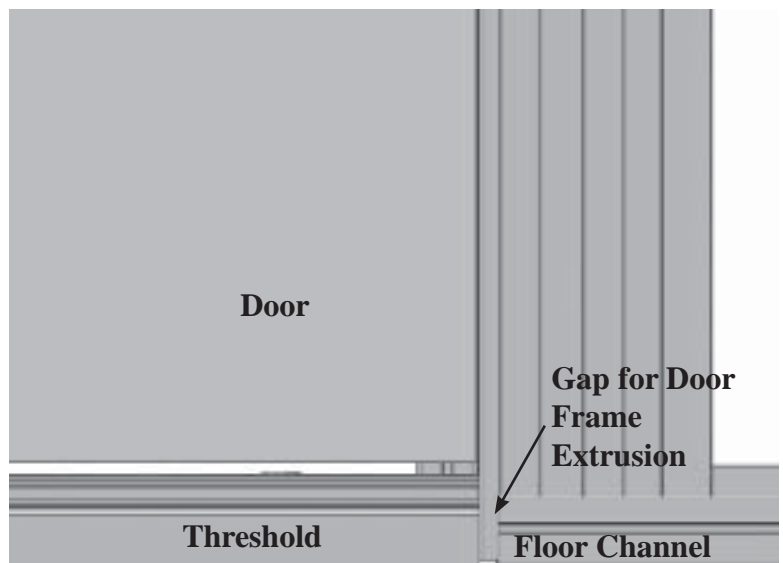

Note: The aluminum nose of the threshold always faces to the outside. If the Door is in-swinging the threshold will have to be notched to allow the adjustable rail to be under the door.