


Installation Instructions

To install Dura-Breeze Screen Room under a roof or awning other than Dura-Fold Awning using Z-Bar Adaptor.

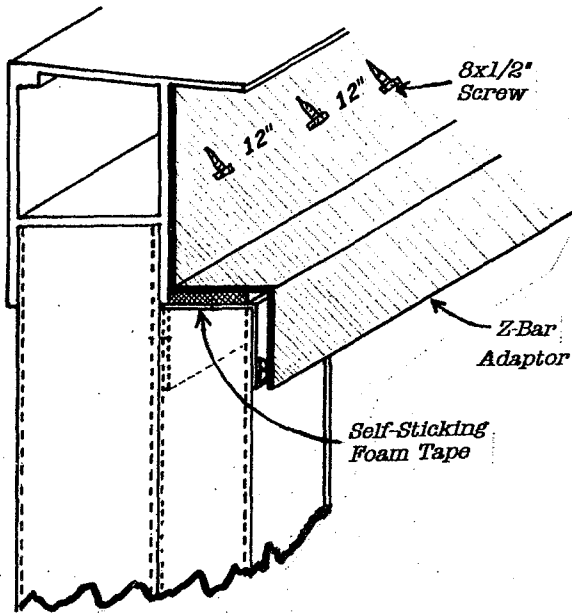


1. Apply self-stick foam tape on underside of horizontal leg of Z-Bar. See Drawing.

2. Position Z-Bar flush against outside of Header and up to Drip Edge. You will need to trim the Z-Bar to the length of the Screen Room front Wall.

3. Attach Z-Bar with #8 x 1/2" self-drilling screws through header wall into cavity. See Drawing. Install screws every 12".

4. Attach Screen Panel Trim Covers with 2" screws rather than 1/4" x 3" bolts with wing nuts. Use 2" screws in all three holes in Trim Covers.

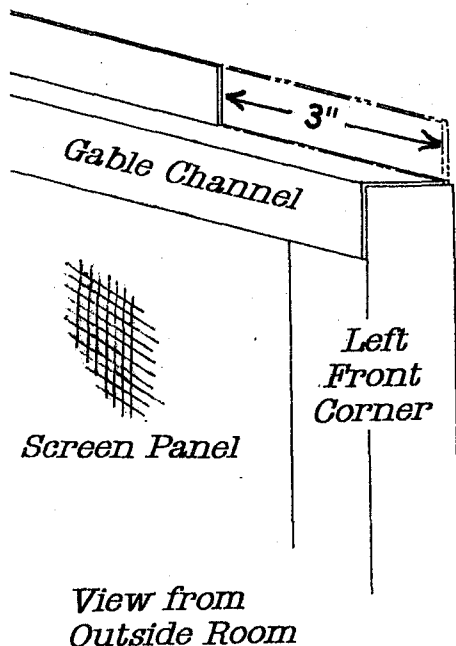

5. The Gable Channel on the first screen panel of both side walls will need to have a 3" notch cut into the front end of the Gable Channel. This will allow the screen panel to clear the Front Header.

6. Attach Front Header Trim Covers to exposed Front Header on each side.