

HANDLE & CLOSER INSTALLATION INSTRUCTIONS FOR OUT SWINGING DOOR DELUXE 3-SEASON, STANDARD 3-SEASON DURA-BREEZE, DELUXE AND FULL SCREEN ROOMS



Step 1

The notched spindle should be broken off to 2-1/4" long.

Step 2

Assemble key and cylinder to the lock button by inserting the key and cylinder into the lock button and turning the key one half turn. Remove key from cylinder prior to further installation. If you do not want to use the lock go to Step 3 and use the standard thumb button.

Step 3

Assemble spindle, spring and thumb button or lock button into outside handle as shown.


Step 4


Insert this assembly through the drilled holes from the outside of door. Then position inside latch with two (2) 3/32" thick shims or (3) 1/16" thick shims over holes on inside of door, (either may be supplied) guiding end of spindle into rectangular slot in latch. Insert #6 x 1-3/8" long, button head, machine screws through door into threaded sleeves and draw up firmly.


CAUTION: DO NOT OVER TIGHTEN AS THIS MAY CAUSE THE LATCH TO BIND.


Step 5

Standing outside pre-drill hole, using 1/8" drill, through outside skin of door. Use the hole in the bottom of door handle as a guide (**Do Not drill through to inside of door**). Install #8 x 3/4" long screw.

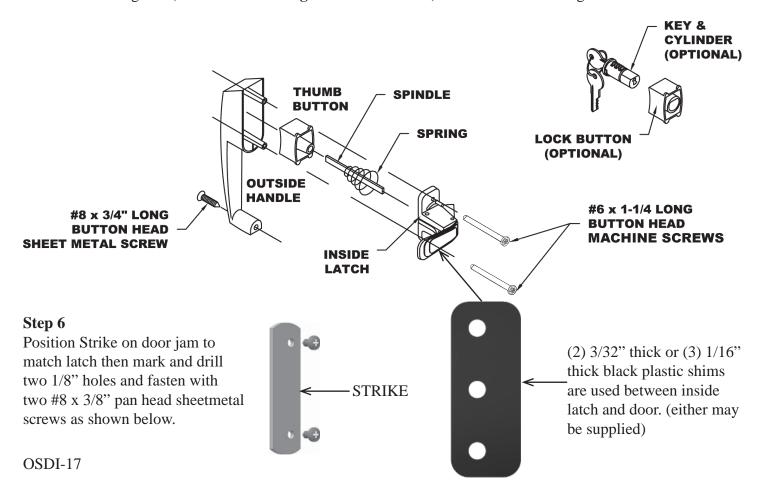


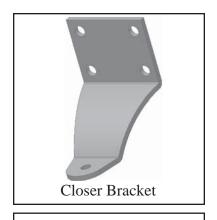

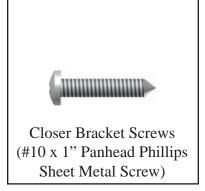

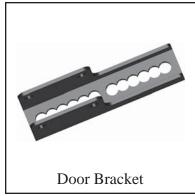




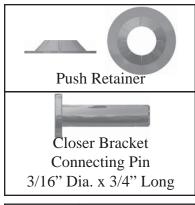




Instructions

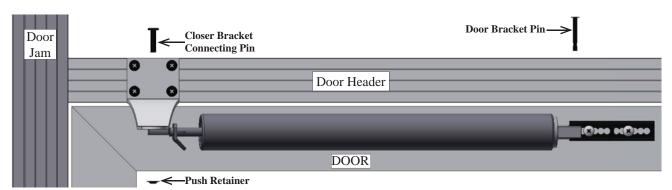

- 1. Locate and pre-drill the four (4) factory marked Positions with a 9/64" drill. Attach the Closer Bracket to the Door Header <u>oriented as shown</u> with four (4) Closer Bracket Screws.
- 2. Slide the Hold Open Washer on to the Shaft of the Door Closer as shown.
- 3. With the Hold Open Washer on the Shaft slide the Closer Bracket Connecting Pin through the Closer Bracket and through the shaft of the Door Closer, then using a pair of pliers squeeze the Push Retainer on to the Pin.
- 4. With the Door Closer attached to the Closer Bracket, insert the Door Closer into the Door Bracket and attach it with the Door Bracket Pin.

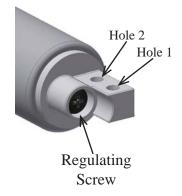

NOTE: Use pin in Hole 1 to set closer for glass door. For season adjustment to screen door use Hole 2.